


# INFRARED HEATER

## WIRING DIAGRAM

### BIO-500F

In-Wall Infrared Heater

110 Volt - 4.5 Amp  
220 Volt - 2.2 Amp

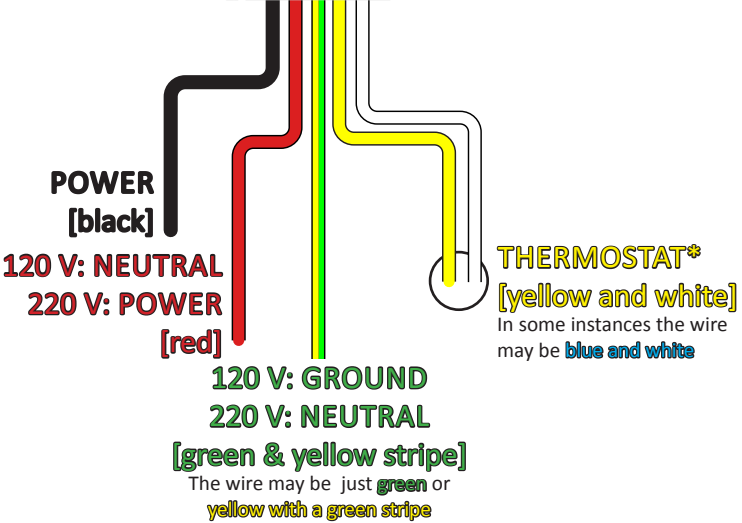

\* Milli-volt thermostat sold separately



# INFRARED HEATER


## WIRING DIAGRAM

### BIO-1000F

In-Wall Infrared Heater



110 Volt - 8.4 Amp  
220 Volt - 4.2 Amp

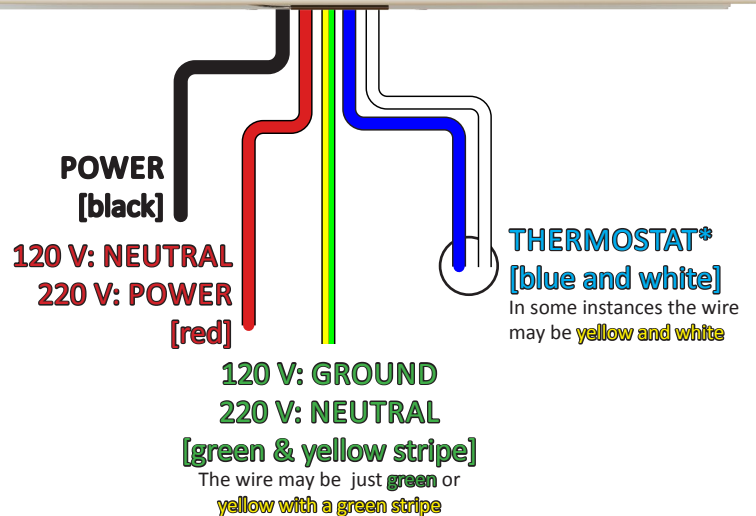

\* Milli-volt thermostat sold separately



# INFRARED HEATER

## WIRING DIAGRAM

### BIO-1500FTA

In-Wall Infrared Heater



110 Volt - 12.5\* Amp  
 220 Volt - 6.5\* Amp

\* On High setting

**POWER**  
 [black]

**120 V: NEUTRAL**  
**220 V: POWER**  
 [red]

**120 V: GROUND**  
**220 V: NEUTRAL**  
 [green & yellow stripe]  
 The wire may be just green or  
 yellow with a green stripe



# INFRARED HEATER

## WIRING DIAGRAM

### BIO-1400 OWA

On-Wall Infrared Heater



115 Volt - 11.5\* Amp  
220 Volt - 6.0\* Amp

\* On High setting

POWER  
[black]

115 V: NEUTRAL  
220 V: POWER  
[red]

115 V: GROUND  
220 V: NEUTRAL  
[green & yellow stripe]  
The wire may be just green or  
yellow with a green stripe

